

Website: <a href="www.luxielectronics.com">www.luxielectronics.com</a></a>
Email: xlu@luxielectronics.com

## RHB-350 Scaler Receiver Quick Start Guide




Thank you for purchasing the Luxi Electronics® RHB-350 scaler receiver. Please read through this manual before using the product.

**How the product functions:** This product must be used with Luxi THB-350 or <u>a compatible HDBT transmitter with POC or POE turned off; failure to turn it off may cause damages and void</u>

warranty. Please refer to the "Video signal path" and "Audio signal path" sections in the right column of the specs on page 4 of the THB-350 quick start guide for details.

**Power options:** This product draws power from an external 24 V power supply sold separately (Luxi P/N 69-008-01). Do NOT plug the power supply connector into any other connectors; this could cause permanent damages to the product and void the warranty.

Captive screw plug termination: The captive screw plugs for power, audio, RS-232 and contact controls are supplied with the unit. Separate the wires about 1" (2.5 cm) long; strip off the wire insulation precisely 3/16" (5 mm) from the end. Identify the positive and negative leads for power; Luxi power supply has a white stripe on the positive wire. If not sure, use a multi meter to verify.

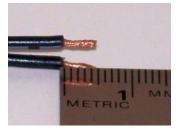




Phone: +1 (949) 654-2047

Address: Irvine, CA, USA

**Mounting options:** Luxi has the under desk mount (Luxi P/N 78-002-01) or the MediaHub table tanks sold separately; the product also fits many other mounting hardware from Extron, Middle Atlantic, etc. Only use the type 4-40, 3/16" (5 mm) long screws supplied with the mounting hardware to screw onto the product. Wrong type of screw could strip the threads; too long screw could touch and short the internal circuit, cause permanent damages to the product and void the warranty.

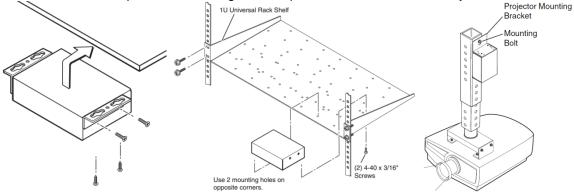

**RS-232 controls:** All functions are controlled by RS-232. The RS-232 port on the RHB-350 is a duplicated port of the connected THB-350. See the RS-232 Setup Guide on Luxi website for more information: <a href="http://luxielectronics.com/attachments/File/Luxi\_RS-232\_setup\_guide.pdf">http://luxielectronics.com/attachments/File/Luxi\_RS-232\_setup\_guide.pdf</a>. See THB-350 quick start guide for RS-232 commands.

Document name: RHB-350 quick start guide Revision: 1.02 Date: 11/26/2017

Specifications are subject to change without notice



Website: <a href="www.luxielectronics.com">www.luxielectronics.com</a>
Phone: +1 (949) 654-2047
Email: <a href="mailto:xlu@luxielectronics.com">xlu@luxielectronics.com</a>
Address: Irvine, CA, USA

**Display power controls:** THB-350 has the configurable display power control feature to enable fully automated system operations without any operator or 3<sup>rd</sup> party control devices. THB will send a display power off command via RS-232 ports of both THB-350 and RHB-350 with a set delay time (1 to 60 minutes) after the last input signal disappears; and will send a display power on command as soon as the first input signal detected, and will automatically select that input. The switcher uses one RS-232 port to connect both external host (optional; only required for setup) and display in parallel with the display in "listening" mode only (only display's Rx pin connected). Here's the wiring diagram:

Ext host	 THB-350	_	RHB-350	_	Display
Rx	 Tx		Tx		Rx
Tx	 Rx	Via Cat6	Rx	NC	NC
Ground	 Ground		Ground		Ground

NC = Not Connected

Use the "2{xxx}R" and "1{yyy}R" commands listed in next page to setup the display power on and off commands respectively, then use the "1\*zR" command to enable the display power control feature while setting the power off delay time at "z" minutes. Use "0R" command to disable the display power control feature. Once setup finished, the external host is not needed for daily operations. The system reset command "r" will not erase the stored display power on and off commands, but will disable the display power control feature (factory default).

**Support:** Please contact your reseller directly for local support; or Luxi using the contact info in the header. See Luxi website for additional and more updated documents.

Document name: RHB-350 quick start guide Revision: 1.02 Date: 11/26/2017



Website: <a href="www.luxielectronics.com">www.luxielectronics.com</a>
Email: <a href="mailto:xlu@luxielectronics.com">xlu@luxielectronics.com</a>

Phone: +1 (949) 654-2047 Address: Irvine, CA, USA



Document name: RHB-350 quick start guide Revision: 1.02 Date: 11/26/2017

Specifications are subject to change without notice



Website: <a href="www.luxielectronics.com">www.luxielectronics.com</a>
Email: <a href="mailto:xlu@luxielectronics.com">xlu@luxielectronics.com</a>

Phone: +1 (949) 654-2047 Address: Irvine, CA, USA

Document name: RHB-350 quick start guide Revision: 1.02 Date: 11/26/2017 Specifications are subject to change without notice